

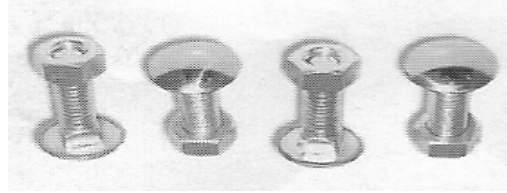


# Bumper Bolts

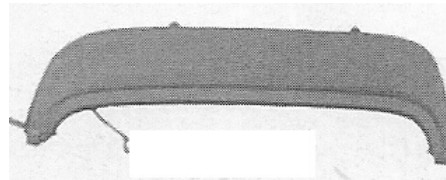

C3000	BUMPER BOLT SET 3/8", Polished Stainless Head	SET 4
-------	--	-------

# FORD FENDER SKIRTS & SCUFF PADS

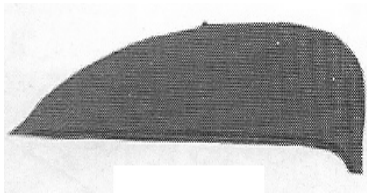

KA8312	1952-54 FORD & MERC FNDR SKIRTS Flush mount	PR
KA8311	1952-54 FORD & MERC SKIRTS Outside mount	PR
A4055	1949-51 FORD SKIRTS	PR
A4058	1955-56 FORD SKIRTS	PR
A4056	1957-58 FORD SKIRTS	PR
KC0015	1936-40 FORD SKIRTS Also fits '37-40 Dodge, Plymouth, Desoto; '39-40 Studebaker; '37-40 Cad. Olds Buick, Pontiac; '39-42 Packard;	PR
KA8313	1952-54 FORD & MERC. SCUFF PADS	PR
C1013	1955-56 FORD SCUFF PADS	PR
C1012	1957-58 FORD SCUFF PADS	PR
KA8306	1955-56 SKIRT MOUNT CLIPS	SET
KA8310	1949-51 SKIRT MOUNT CLIPS	SET
KA8301	1949-51 FENDER SKIRT RUBBER	SET
KA8305	1955-56 FENDER SKIRT RUBBER	SET
KA8303	1957-58 FENDER SKIRT RUBBER	SET